

Výkaz sestavení konzol a upevnění	
1B110	8
2B110	3
2A210	12
5A210	4
1B310	1
2B310	2
2A630	10
3A630	2
1B830	7
1A12II	1
1B12II	1
3A22II	2
3A24II	1
3A24X	1
3B24II	1
5A22X	1
5B22X	1
5A24X	1
80-31T	42
80-37BP	20
80-39	18
80-40	10
80-42L,P	4
80-42U	2
80-34	2