

Rozvody napětí

| <u>+</u> <u>1r</u> | | <u>-</u> <u>1tm</u> | | <u>+B</u> <u>10r</u> | | <u>-B</u> <u>10tm</u> | |
|-----------------------|------|------------------------|------|-------------------------|------|--------------------------|------|
| 170311 | 9082 | 150702 | 8813 | 170101 | 2284 | 170102 | 2284 |
| 170310 | 2284 | 150690 | 8811 | 100101 | 2284 | 100103 | 2284 |
| 150141 | 8811 | 150501 | 8811 | 100201 | 2284 | 100203 | 2284 |
| 150161 | 8811 | 150402 | 8813 | 100301 | 2284 | 100303 | 2284 |
| 150223 | 8812 | 150302 | 8813 | 100401 | 8803 | 100403 | 8803 |
| 150261 | 8813 | 150396 | 8813 | 100501 | 8803 | 100503 | 8803 |
| 150461 | 8811 | 150392 | 8813 | 100601 | 2284 | 100603 | 2284 |
| 150761 | 8812 | 150301 | 8813 | 100701 | 2284 | 100703 | 2284 |
| 140531 | 8812 | 140101 | 8812 | 100801 | 8813 | 100803 | 8813 |
| 140511 | 8801 | 140121 | 8812 | 100901 | 8813 | 100903 | 8813 |
| 140432 | 8812 | 140311 | 8812 | 101001 | 2284 | 101003 | 2284 |
| 140412 | 8801 | 140390 | 8812 | 091201 | 8808 | 091203 | 8808 |
| 140011 | 8812 | 140790 | 8812 | 091101 | 8808 | 091103 | 8808 |
| 130111 | 8801 | 140890 | 8812 | 090901 | 8803 | 091001 | 8803 |
| 130121 | 8809 | 130801 | 8803 | 090701 | 8803 | 090801 | 8803 |
| 130151 | 8813 | 130601 | 8802 | 090601 | 8806 | 090503 | 8804 |
| 130163 | 8812 | 130411 | 8801 | 090301 | 8805 | 090403 | 8805 |
| 130171 | 8813 | 130141 | 8801 | 090101 | 8804 | 090203 | 8804 |
| 130273 | 8813 | 130131 | 8810 | 080101 | 9081 | 080103 | 9081 |
| 130281 | 8813 | 130101 | 8801 | | | | |
| 130311 | 8811 | 120602 | 2284 | | | | |
| 130421 | 8812 | 120701 | 2284 | | | | |
| 130441 | 8811 | 11510501 | 8813 | | | | |
| 130451 | 8811 | 110709 | 2284 | | | | |
| 130473 | 8812 | 100104 | 2284 | | | | |
| 130561 | 8802 | 0939A2 | 2284 | | | | |
| 130761 | 8803 | 0937A2 | 9082 | | | | |
| 120821 | 2284 | 042111 | 8802 | | | | |
| 110705 | 2284 | 042102 | 8802 | | | | |
| 110707 | 2284 | | | | | | |
| 11510101 | 8813 | | | | | | |
| 100102 | 2284 | | | | | | |
| 042101 | 8802 | | | | | | |

Rozvody napětí

| +T <u>0.75č</u> | | -T <u>0.75č</u> | | PE-H <u>1.5zž</u> | |
|---------------------------|------|---------------------------|------|-----------------------------|------|
| 150741 | 8814 | 150751 | 8814 | HZSV | 2284 |
| 150621 | 8814 | 150631 | 8814 | 032103 | 2284 |
| 150111 | 8814 | 150131 | 8814 | 110714 | 2284 |
| 130231 | 8814 | 130331 | 8814 | 085805 | 9081 |
| 120551 | 8814 | 120541 | 8814 | | |
| 101102 | 2284 | 101104 | 2284 | | |
| 08590402 | 9081 | 08590302 | 9081 | | |
| +BZ <u>10r</u> | | -BZ <u>10tm</u> | | +BM <u>1.5r</u> | |
| 170201 | 2284 | 170202 | 2284 | 170301 | 2284 |
| 101201 | 8809 | 101203 | 8809 | 150321 | 8809 |
| 101301 | 8810 | 101303 | 8810 | 150331 | 8810 |
| 101401 | 8809 | 101403 | 8809 | | |
| +DN1 | | -DN1 | | +DN2 | |
| 110517 | 8812 | 110532 | 8812 | 110617 | 8812 |
| 110417 | 8812 | 110432 | 8812 | 100702 | 2284 |
| 100602 | 2284 | 100604 | 2284 | 040507 | 8807 |
| 040307 | 8805 | 040308 | 8805 | | |
| 040107 | 8804 | 040108 | 8804 | | |
| 030107 | 8806 | 030108 | 8806 | | |
| +D | | | | -DN2 | |
| 150181 | 9082 | | | 110632 | 8812 |
| 150281 | 9082 | | | 100704 | 2284 |
| 150381 | 9082 | | | 040508 | 8807 |
| 150681 | 9082 | | | | |
| 150781 | 9082 | | | | |
| 140881 | 9082 | | | | |
| 140581 | 9082 | | | | |
| 140481 | 9082 | | | | |
| 140181 | 9082 | | | | |
| 130181 | 9082 | | | | |
| 130381 | 9082 | | | | |
| 130581 | 9082 | | | | |
| 130881 | 9082 | | | | |
| 130913 | 9082 | | | | |
| 120781 | 9082 | | | | |
| 120681 | 9082 | | | | |
| 120581 | 9082 | | | | |
| 093921 | 9082 | | | | |
| 093721 | 9082 | | | | |
| 08600201 | 9081 | | | | |