

Výkr.	Funkce	RM Kopř.o.n.	K.č. 902	PZS E1		K.č. 904	PZS E2		K.č. 906	PZS E3		K.č. 908	RM Štramb.	výkr.
číslo		svorkov.	48p1	svorkov.		48p1	svorkov.		48p1	svorkov.		48p1	svorkov.	číslo
7600	SM	K1-070101	1	040101	040401	1	000101	000102	1	000101	000102	1	KS1-091101	7600
7600	ZSM	02	2	02	02	2	03	04	2	03	04	2	02	7600
7600	VT	03	3	03	03	3	05	06	3	05	06	3	03	7600
7600	ZVT	04	4	04	04	4	07	08	4	07	08	4	04	7600
7600	S-ČS	05	5	05	05	5	09	10	5	09	10	5	05	7600
7600	S-ČS	06	6	06	06	6	11	12	6	11	12	6	06	7600
7600	1TUS	07	7	07	07	7	0201	0202	7	0201	0202	7	07	7600
7600	1TUS	08	8	08	08	8	03	04	8	03	04	8	08	7600
7600	2TUS	09	9	09	09	9	05	06	9	05	06	9	09	7600
7600	2TUS	10	10	10	10	10	07	08	10	07	08	10	10	7600
8211	LS1-E3	11	11	11	11	11	09	10	11	09	10	11	11	8311
8211	LS2-E3	12	12	12	12	12	11	12	12	11	12	12	12	8311
		070201	13	030101	030401	13	0301	0302	13	0301	0302	13	081101	
		02	14	02	02	14	03	04	14	03	04	14	02	
		03	15	03	03	15	05	06	15	05	06	15	03	
		04	16	04	04	16	07	08	16	07	08	16	04	
7800	LBŠ	05	17	05	05	17	09	10	17	09	10	17	05	7800
7800	LBŠ	06	18	06	06	18	11	12	18	11	12	18	06	7800
		07	19	07	07	19	0401	0402	19	0401	0402	19	07	8323
		08	20	08	08	20	03	04	20	03	04	20	08	8323
		09	21	09	09	21	05	06	21	05	06	21	09	8323
		10	22	10	10	22	07	08	22	07	08	22	10	8323
		11	23	11	11	23	09	10	23	09	10	23	11	8323
		12	24	12	12	24	11	12	24	11	12	24	12	8323
8311	S1-E3	070301	25	020101	020401	25	0501	0502	25	0501	0502	25	071101	8323
8311	S2-E3	02	26	02	02	26	03	04	26	03	04	26	02	8323
		03	27	03	03	27	05	06	27	05	06	27	03	8323
		04	28	04	04	28	07	08	28	07	08	28	04	8323
8311	J1-E3	05	29	05	05	29	09	10	29	09	10	29	05	8323
8311	J2-E3	06	30	06	06	30	11	12	30	11	12	30	06	8323
		07	31	07	07	31	0601	0602	31	0601	0602	31	07	8001
		08	32	08	08	32	03	04	32	03	04	32	08	8001
8001	PS1-E3	09	33	09	09	33	05	06	33	05	06	33	09	8311
8001	PS2-E3	10	34	10	10	34	07	08	34	07	08	34	10	8311
		11	35	11	11	35	09	10	35	09	10	35	11	
		12	36	12	12	36	11	12	36	11	12	36	12	

Výkr.	Funkce	RM Kopř.o.n.	K.č. 902	PZS E1		K.č. 904	PZS E2		K.č. 906	PZS E3		K.č. 908	RM Štramb.	výkr.
číslo		svorkov.	48p1	svorkov.		48p1	svorkov.		48p1	svorkov.		48p1	svorkov.	číslo
		K1-070401	37	040201	040501	37	000701	000702	37	000701	000702	37	KS1-061101	
		02	38	02	02	38	03	04	38	03	04	38	02	
7025	2TUSJ1	03	39	03	03	39	05	06	39	05	06	39	03	
7025	2TUSJ2	04	40	04	04	40	07	08	40	07	08	40	04	
		05	41	05	05	41	09	10	41	09	10	41	05	
		06	42	06	06	42	11	12	42	11	12	42	06	
7800	1PUK	07	43	07	07	43	0801	0802	43	0801	0802	43	07	7800
7800	1PUK	08	44	08	08	44	03	04	44	03	04	44	08	7800
7800	L-ČSŠ	09	45	09	09	45	05	06	45	05	06	45	09	7800
7800	L-ČSŠ	10	46	10	10	46	07	08	46	07	08	46	10	7800
7800	L-DŠŠ	11	47	11	11	47	09	10	47	09	10	47	11	7800
7800	L-DŠŠ	12	48	12	12	48	11	12	48	11	12	48	12	7800
7800	L-HOŠ	070501	49	030201	030501	49	0901	0902	49	0901	0902	49	091201	7800
7800	L-HOŠ	02	50	02	02	50	03	04	50	03	04	50	02	7800
7800	1PUŠ	03	51	03	03	51	05	06	51	05	06	51	03	7800
7800	1PUŠ	04	52	04	04	52	07	08	52	07	08	52	04	7800
7800	S-DSK	05	53	05	05	53	09	10	53	09	10	53	05	7800
7800	S-DSK	06	54	06	06	54	11	12	54	11	12	54	06	7800
7800	S4-S5DS	07	55	07	07	55	1001	1002	55	1001	1002	55	07	7800
7800	S4-S5DS	08	56	08	08	56	03	04	56	03	04	56	08	7800
7800	L1J	09	57	09	09	57	05	06	57	05	06	57	09	7800
7800	L1J	10	58	10	10	58	07	08	58	07	08	58	10	7800
7800	4JŠ	11	59	11	11	59	09	10	59	09	10	59	11	7800
7800	4JŠ	12	60	12	12	60	11	12	60	11	12	60	12	7800
7800	2JŠ	070601	61	020201	020501	61	1101	1102	61	1101	1102	61	081201	7800
7800	2JŠ	02	62	02	02	62	03	04	62	03	04	62	02	7800
7800	5JŠ	03	63	03	03	63	05	06	63	05	06	63	03	7800
7800	5JŠ	04	64	04	04	64	07	08	64	07	08	64	04	7800
7800	3JŠ	05	65	05	05	65	09	10	65	09	10	65	05	
7800	3JŠ	06	66	06	06	66	11	12	66	11	12	66	06	
7800	1JŠ	07	67	07	07	67	1201	1202	67	1201	1202	67	07	7800
7800	1JŠ	08	68	08	08	68	03	04	68	03	04	68	08	7800
7800	S-HOK	09	69	09	09	69	05	06	69	05	06	69	09	7800
7800	S-HOK	10	70	10	10	70	07	08	70	07	08	70	10	7800
		11	71	11	11	71	09	10	71	09	10	71	11	
		12	72	12	12	72	11	12	72	11	12	72	12	

[illegible]