 




 
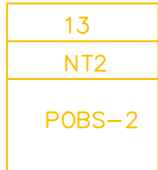 
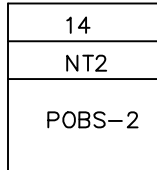 
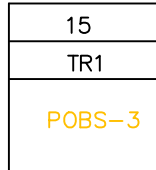 
 
 

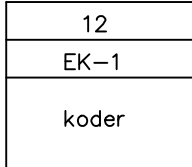 
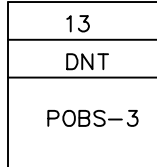 
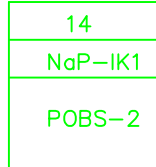 
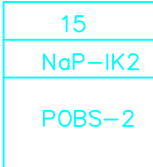 


				10 11 10 11 12 13 14																							
19					P220 Px220 ZP PS ZS SxK1 N Z220 Zx220 SK1 ZN 3K3																						
18	Brniště		Liberec		LR-CAS		KČ1		OV1		PrS-ZS		PrS-ŽS		S-DSO												
	CAS1A		CAS1A		NMŠ1-2000		NMŠ1-2000		NMŠ1-2000		NMŠ-60		NMŠ-60		NMŠ1-2000												
	1		2		3		4		5		6		7		8												
17	S-N		S-DS		S-NO		S-F		S-1ŽBS		S-ZS		S-ČS		S-2ŽBS												
	NMŠ1-2000		NMŠM1-1500		NMŠ1-2000		NMŠM1-1500		NMŠ-60		NMŠ-60		NMŠ-60		NMŠ-60												
	1		2		3		4		5		6		7		8												
16	S-PV		LR-PO		ST-V		LR-TO		KA-C		S-H		S-G		S-4G												
	NMŠM1-1500		NMŠM1-1500		NMŠM1-1500		NMŠM1-1500		NMŠ1-2000		NMŠ1-2000		NMŠ1-2000		NMŠ1-2000												
	1		2		3		4		5		6		7		8												
15	LR-N		LR-DS		LR-M		LR-F		LR-1ŽBS		LR-ZS		LR-ČS		LR-2ŽBS												
	NMŠ1-2000		NMŠM1-1500		NMŠM1-1500		NMŠM1-1500		NMŠ-60		NMŠ-60		NMŠ-60		NMŠ-60												
	1		2		3		4		5		6		7		8												
14	IK-1		IK-2		A2		A1		A3		A5		A7		A9												
	NMvŠ2-1000/1000		NMvŠ2-1000/1000		NMŠM1-1500		NMŠM1-1500		NMŠM1-1500		NMŠM1-1500		NMŠM1-1500		NMŠM1-1500												
	1		2		3		4		5		6		7		8												
13	Měřicí svorky		 		Po		SŘ		LR-Ř		LR-DSX		S2-1-DSX		S3-9-DSX												
			TLKČ1 HNB		VUD PS ZS		NMŠM1-1500		NMŠM1-1500		NMŠM1-1500		NMŠM1-1500		NMŠM1-1500												
	1		2		3		4		5		6		7		8												
12	ZR		MP		COK		PR		1AK		1DK		HNB		K-54												
	NMŠ2-4000		NMPŠ4-1000/200		NMŠ2-4000		NMŠ2-4000		NMŠM2-1750		NMŠ1-2000		NMŠ2-4000		NMŠ1-2000												
	1		2		3		4		5		6		7		8												
11									240 Ω																		
	1		2		3		4		5		6		7		8												
 																	10										
9																											
8																											
7																											
6																											
5																											
o																											
4	01 1AK 1	02 K54 1	03 o 5	04 ZN 10	05 N 2	06 2K1K 1	07 1K1K 1	08 S 2Y 0,16	09 S R 0,16	10 S Sk3 0,16	11 S Z 0,16	12 S Sk1 0,16	13 PrS Z 0,16	14 PrS Y 0,16	15 PrS Sk1 0,16	16 LR ZB 0,16	17 LR R 0,16	18 LR Z 0,16	19 P220 2	20 IK1 5	21 IK1 5	22 IK2 5	23 IK2 5	24 KD 1	25 LR F 0,16	26 o 1	panel pojístek
o	SVORKOVNICOVÝ PANEL DOLNÍ																										
1																											

	10 11 10 11 12 13 14																										
19			P220 Px220 ZP PS ZS SxK1 N Z220 Zx220 SK1 ZN 3K3																								
18	Brniště	Liberec	LR-CAS	KČ1	OV1	PrS-ZS	PrS-ŽS	S-DSO																			
	CAS1A	CAS1A	NMŠ1-2000	NMŠ1-2000	NMŠ1-2000	NMŠ-60	NMŠ-60	NMŠ1-2000																			
	1		2		3		4		5		6		7		8												
17	S-N	S-DS	S-NO	S-F	S-1ŽBS	S-ZS	S-ČS	S-2ŽBS																			
	NMŠ1-2000	NMŠM1-1500	NMŠ1-2000	NMŠM1-1500	NMŠ-60	NMŠ-60	NMŠ-60	NMŠ-60																			
	1		2		3		4		5		6		7		8												
16	S-PV	LR-PO	ST-V	LR-TO	JR.ZYBAVS	S-H	S-G	S-4G																			
	NMŠM1-1500	NMŠM1-1500	NMŠM1-1500	NMŠM1-1500	NMŠ1-2000	NMŠ1-2000	NMŠ1-2000	NMŠ1-2000																			
	1		2		3		4		5		6		7		8												
15	LR-N	LR-DS	LR-M	LR-F	LR-1ŽBS	LR-ZS	LR-ČS	LR-2ŽBS																			
	NMŠ1-2000	NMŠM1-1500	NMŠM1-1500	NMŠM1-1500	NMŠ-60	NMŠ-60	NMŠ-60	NMŠ-60																			
	1		2		3		4		5		6		7		8												
14	AI	IK-2	A2	A1	A3	A5	A7	A9																			
	NMŠ1-2000	NMŠ2-1000/1000	NMŠM1-1500	NMŠM1-1500	NMŠM1-1500	NMŠM1-1500	NMŠM1-1500	NMŠM1-1500																			
	1		2		3		4		5		6		7		8												
13	x-x PS-ZS x-x TB N-ZN zem	TLKČ1 HNB	Po	SŘ	LR-Ř	LR-DSX	S2-1-DSX	S3-9-DSX																			
			VUD PS ZS	NMŠM1-1500	NMŠM1-1500	NMŠM1-1500	NMŠM1-1500	NMŠM1-1500																			
	2		3		4		5		6		7		8														
12	ZR	MP	COK	PR	1AK	1DK	HNB	K-54																			
	NMŠ2-4000	NMPŠ4-1000/200	NMŠ2-4000	NMŠ2-4000	NMŠM2-1750	NMŠ1-2000	NMŠ2-4000	NMŠ1-2000																			
	1		2		3		4		5		6		7		8												
11					240 Ω																						
	1		2		3		4		5		6		7		8												
																10											
9																											
8	11		12		13		14		15		16		17														
	1K1K	2K1K	EK-1	DNT	NT2	TR1	TR2	TR3	ST3/R	ST3/R																	
	KVR	KVR	koder	POBS-3	POBS-2	POBS-3																					
7																											
6	1zbK.JQ	JRT1.J	JRT2.J	JRT3.J	JR.2,3J	JR.4J	o	S-NFI																			
	NMŠ1-2000	NMŠ1-2000	NMŠ1-2000	NMŠ1-2000	NMŠ1-2000	NMŠ1-2000	NMŠ1-2000	NMŠ1-2000																			
	1		2		3		4		5		6		7		8												
5																											
o																											
4	01 1AK	02 K54	03 o	04 ZN	05 N	06 2K1K	07 1K1K	08 S 2Y	09 S R	10 S Sk3	11 S Z	12 S Sk1	13 PrS Z	14 PrS Y	15 PrS Sk1	16 LR ZB	17 LR R	18 LR Z	19 P220	20 IK1	21 IK1	22 IK2	23 IK2	24 KD	25 LR F	26 o	panel pojístek
	1	1	5	10	2	1	1	0,16	0,16	0,16	0,16	0,16	0,16	0,16	0,16	0,16	0,16	0,16	2	5	5	5	5	1	0,16	1	
o	SVORKOVNICOVÝ PANEL DOLNÍ																										
1	2IP-01	2IP-02	3IP-03	3IP-04						801	801																
																3-0603	3-0603										