

11-2		PŘEHLED RELÉ-Jablonné									STOJAN: 01	
TYP	OZNAČENÍ	UMÍSTĚNÍ		POUŽITO NA VÝKRESE ČÍSLO								
		PATRO	POLE	VINUTÍ	13-11-12	23-21-22	33-31-32	43-41-42	53-51-52	63-61-62	73-71-72	83-81-82
NMŠ1-2000	B1	13	1	4-3	4-1	4-1	4-2	4-2	8	4-3	8	
NMŠ1-2000	B3		2	4-3	4-1	4-2	4-2	4-3	8	4-1	8	4-2
NMŠ1-2000	B5		3	4-3	4-1	4-2	4-2	8	4-3	4-3	8	
NMŠ1-2000	B9		4	4-3	4-1	4-2	4-2	8	4-3	4-3	8	
NMŠ1-2000	B7		5	4-3	4-1	4-2	4-2	8	4-3	4-3	8	
NMŠ1-4000	OPR1		6	VUD16		VUD15		VUD15				
NMŠ1-4000	BI		7	4-3		J1.8207		J1.8202				J1.8202
NMŠ1-2000	L-G		8	8	5-3	4-1						
NMŠ1-4000	L-4G	12	1	8		5-3		8		4-1		5-3
NMVŠ2-1000/1000	KM-1		2	7		7						
NMŠM1-1500	OKM1		3	7		7						
NMŠ1-2000	L-DSO		4	4-1	7	7						4-1
NMŠ1-2000	L-NO		5	4-1	6-2	7		8				4-1
NMŠ1-2000	L-FO		6	4-1	VUD16	7	VUD15		J1.8202		J1.8202	4-1
NMŠ1-2000	OPR		7	VUD16	VUD16	VUD15	VUD16					
NMŠ2-60	KPR		8	VUD16		4-1						
		11	1									
			2									
			3									
			4									
			5									
			6									
			7									
			8									
NMŠ1-2000	BJ.ZYBAVS	06	1	7606		00	4-2	7				
NMŠ1-2000	BJT6.J		2	7606		00	4-2			7		
NMŠ1-2000	BJT7.J		3	7606		00	4-2	4-1		7		
NMŠ1-2000	1zaK.JQ		4	7101	4-1	00	4-2		8202	7	8202	
			5									
			6									
NMŠ1-2000	1zaK.J		7	7101	7101	00	7101		7101			
NMŠ1-2000	1zaK-RPN		8	7101		7101						
NMŠ1-2000	J1.ZYBAVS	05	1	J1.8207	4-1	00	4-2	7				
			2									
NMŠ1-2000	J1.NUP		3	J1.8202		J1.8202		J1.8202				
NMŠ1-2000	1zaK.VPP		4	J1.8202		J1.8202		J1.8202			7	J1.8202
			5									
			6									
			7									
NMŠ2-4000	JPB1-S		8	7101		J1.8202		J1.8202				7101