

# PN ACS2000 Frauscher 22-0901

ABP1		ST6	x
2d			2z
4d			4z
6d			6z
8d			8z
10d			10z
12d			12z
14d	reset+	reset-	14z
16d			16z
18d	reset+	reset-	18z
20d			20z
22d			22z
24d	volno+	volno+	24z
26d	obsazeno+	obsazeno+	26z
28d			28z
30d	volno Fm	volno Fm	30z
32d	obsazeno P	obsazeno P	32z

ABP2 ST6		X
2d		2z
4d		4z
6d		6z
8d		8z
10d		10z
12d		12z
14d	reset+	reset-
16d		16z
18d	reset+	reset-
20d		20z
22d		22z
24d	volno+	volno+
26d	obsazeno+	obsazeno+
28d		28z
30d	volno Fm	volno Fm
32d	obsazeno P	obsazeno P
		30z

ABP3 ST6		X
2d		2z
4d		4z
6d		6z
8d		8z
10d		10z
12d		12z
14d	reset+	reset- 14z
16d		16z
18d	reset+	reset- 18z
20d		20z
22d		22z
24d	volno+	volno+ 24z
26d	obsazeno+	obsazeno+ 26z
28d		28z
30d	volno Fm	volno Fm 30z
32d	obsazeno P	obsazeno P 32z

ABP4		ST6	x
2d			2z
4d			4z
6d			6z
8d			8z
10d			10z
12d			12z
14d	reset+	reset-	14z
16d			16z
18d	reset+	reset-	18z
20d			20z
22d			22z
24d	volno+	volno+	24z
26d	obsazeno+	obsazeno+	26z
28d			28z
30d	volno Fm	volno Fm	30z
32d	obsazeno P	obsazeno P	32z

ABP5	ST6	x
2d		2z
4d		4z
6d		6z
8d		8z
10d		10z
12d		12z
14d	reset+	14z reset-
16d		16z
18d	reset+	18z reset-
20d		20z
22d		22z
24d	volno+	24z volno+
26d	obsazeno+	26z obsazeno+
28d		28z
30d	volno Fm	30z volno Fm
32d	obsazeno P	32z obsazeno P

## Zapojení propojovacích kabelů FTP

[illegible]

09/2025

7007