


Schéma zapojení modulární konektor

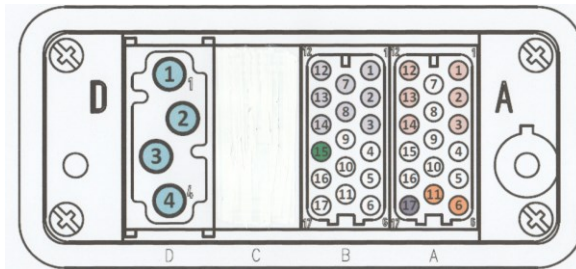

	Pin	Signál	Rozhraní v ELM		
Pozice D	1	GPS	ANT-3		
	2	GSM-R	ANT-2		
	3	-			
	4	-			
Pozice C	1A	TX+	ETH-2		
	2A	RX+			
	3A	TX-			
	4A	RX-			
	1B	TX+	ETH-3		
	2B	RX+			
	3B	TX-			
	4B	RX-			
Pozice B	1	+24V	IN2 (Vstup DC)		
	2	-24V			
	3	U2-Hi			
	7	SHIELD U DC			
	12	+24V			
	13	-24V			
	14	I2-Hi (+I)			
	8	SHIELD I DC			
	5	SHIELD	Jen u verze - C		
	6	GND			
	11	DATA -A			
	17	DATA +B			
	Pozice A	1		U1-Hi	IN1 (Vstup AC)
		2		U1-Lo	
3		SHIELD U AC			
12		I1-Hi (+i)			
13		I1-Lo (-i)			
14		SHIELD I AC			
6		+PS	Napájení ELM		
11		-PS			
17		SHIELD		Kostra ELM	