

11-3		PŘEHLED RELÉ-Jablonné									STOJAN: 02	
TYP	OZNAČENÍ	UMÍSTĚNÍ		POUŽITO NA VÝKRESE ČÍSLO								
		PATRO	POLE	VINUTÍ	13-11-12	23-21-22	33-31-32	43-41-42	53-51-52	63-61-62	73-71-72	83-81-82
	CAS1A-Br	18	1	4-3								
	CAS1A-LR		2	4-5								
NMŠ1-2000	LR-CAS		3	4-5				4-5				
NMŠ1-2000	KČ1		4	4-5	4-3	4-3				4-5		4-5
NMŠ1-2000	OV1-LR		5	vÚD-7	4-5							
NMŠ-60	Př-ZS		6	5-1		7		5-1				
NMŠ-60	Př-ŽS		7	5-1				7				
NMŠ1-2000	S-DSO		8	4-4	4-4	7	8	5-1	5-1	5-1		5-1
NMŠ1-2000	S-N	17	1	4-4	4-4	4-4	7	5-1	4-4	5-1	5-1	5-1
NMŠM1-1500	S-DS		2	4-4	4-4	4-4		5-1	7			
NMŠ1-2000	S-NO		3	4-4	4-5	4-4			6-2			
NMŠM1-1500	S-F		4	4-4	6-2	4-4	4-4	5-1	7	5-1	5-1	5-1
NMŠ-60	S-1ŽBS		5	5-1		4-4		7		5-1		
NMŠ-60	S-ZS		6	5-1		4-4		5-1				
NMŠ-60	S-ČS		7	5-1		4-4		7		7		
NMŠ-60	S-2ŽBS		8	5-1		4-4						
NMŠM1-1500	S-PV	16	1	4-4	4-4	4-4		4-4				
NMŠM1-1500	LR-PO		2	4-5	4-5	4-5						
NMŠM1-1500	S-TV		3	4-4	4-4							
NMŠM1-1500	LR-TO		4	4-5								4-5
NMŠ1-2000	JR.ZYBAVS		5	42		4-5	7	7				
NMŠ1-2000	S-H		6	4-4		4-4		6-2	7	5-1	5-1	5-1
NMŠ1-2000	S-G		7	8				5-1				
NMŠ1-2000	S-4G		8	8	8		5-1	5-1				
NMŠ1-2000	LR-N	15	1	4-5	4-5	5-2	4-5	5-2	5-2	7		
NMŠM1-1500	LR-DS		2	4-5	4-5	5-2		7	8			4-5
NMŠM1-1500	LR-M		3	4-5	4-5	5-2	5-2	7	5-2	7		
NMŠM1-1500	LR-F		4	4-5	5-2	4-5	6-2	5-2	4-5	7	5-2	4-5
NMŠ-60	LR-1ŽBS		5	5-2				7				5-2
NMŠ-60	LR-ZS		6	5-2		4-5						
NMŠ-60	LR-ČS		7	5-2		4-5		7		8		4-5
NMŠ-60	LR-2ŽBS		8	5-2		4-5		5-2				7
NMŠ1-2000	A1	14	1	4-4		42A		4-2		3		
NMVS2-1000/1000	IK-1		2	3		4-4		4-5		3		
NMŠM1-1500	A2		3	4-4	4-4		4-4			4-5	4-4	
NMŠM1-1500	A1		4	4-4	4-4	4-4	8	5-2	8	4-5	4-4	4-5
NMŠM1-1500	A3		5	4-4	4-4	8	4-4		8	4-5	4-4	
NMŠM1-1500	A5		6	4-4	4-4	8	4-4		8	4-5	4-4	
NMŠM1-1500	A7		7	4-4	4-4	8	4-4		8	4-5	4-4	
NMŠM1-1500	A9		8	4-4	4-4	8	4-4		8	4-5	4-4	