

17	-	-	NAP. M + R	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	panel svorkovnicový č.v. 72 595a							
	Sv12	Sv6	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12	Sv12								
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20										
16	-		D		PRH		PRZ		1zaK-R		V1-R		STQ		-								panel v. vazby č. v. 72 571c							
	-		NMPŠ1-2000		NMŠ1-2000		NMŠ1-2000		NMŠ2-4000		NMŠ2-4000		NMŠ2-4000		-															
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20										
15	HIS1		HIS2		HIS3		HIS4		PIS				HIS1		HIS2		HIS3		HIS4				panel v. vazby č. v. 72 571c							
	č.v. 60 052B		č.v. 60 052B		č.v. 60 052B		č.v. 60 052B		NMŠ1-2000				0,5A		0,5A		0,5A		0,5A		0,5A									
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20										
14	DKP		DK		KM		ZR		OK		DN		1K1K		2K1K								panel ZP v. vazba č. v. 72 571c							
	NMŠM1-1500		NMŠ1-2000		NMŠ1-2000		NMŠ2-4000		NMŠ1-2000		NMŠ2-4000		TAZ-1		TAZ-1															
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20										
13	KMQ		ITM - 3x5A				ITM - 3x10A				-		MK										panel ZP v. vazba č. v. 72 571c							
	NMŠM1-1500		MOTOR.				MOTOR.				-		SMMS-1																	
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20										
12	01	02	03	04	05	06	07	08	09	10	11	12	13	V1	TI.	V2							panel pojistko- odporový č.v. 72 643b							
	0,5A	0,5A	2A	1A	2A	1A	0,5A	1A	2A	5A	5A	-	-	HM	HM	ZM														
11	+	-	HIS	Px220	Zx220	Px220	P220	Z220	-	+HM	-HM	+ZM	-ZM	-M	SM	S	SP	+M	-	+RM	-RM	-	PONB	PONB						
	5A	1A	10A	10A	10A	1A	5A	5A	-	10A	10A	10A	10A	20A	10A	5A	10A	20A	-	30A	30A	-	REL.	MĚN.						
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	25						
10	DC SIRIUS		DCA		DCB		OC		OCac																				panel jističů	
	2xC10A		C1A		C1A		C2A		C2A																					
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	25						
08	1 A1	2 B1	3 A2	4 B2	+OC	-ES	+OCac	svorkovnice umístěny zezadu																						panel s vanou přenos. zař. SIRIUS
	21	22	23	24																										
	NDC A		NDC B		OCco1		OCco2		OCi		VPB1		VPB2		VPB3		VPB4		VPB5											
	NDC		NDC		OCco		OCco		OCi		OCac		OCac		OCac		OCac		OCac											
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23							
07	DPS		DUS		DUSK		DVT		DVTK		DZV		D2TU		DST								panel v. vazby							
	NMŠ1-2000		NMŠ1-2000		NMŠ1-2000		NMŠ1-2000		NMŠ1-2000		NMŠ1-2000		NMŠ1-2000		NMŠ1-2000															
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23							
06	DZST		DRZST		DUST		DRBP		DVZV		DOZ		LNF										panel v. vazby							
	NMŠ2-4000		NMŠ2-4000		NMŠ2-4000		NMŠ2-4000		NMŠ2-4000		NMŠ2-4000		NMŠ2-4000		NMŠ2-4000															
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23							
05																														
04																														
03	Hlavní i záložní měnič BZB1 v patrech 08 a 05 pro původní KO 75Hz budou demontovány, včetně příslušenství a polic. Uvolněný prostor poslouží ke zřízení počítače náprav a TZZ směr Potštejn.																													
02																														
01																														